3 **Q.** Draw the sequential non-optimized basic 32-bit multiplication unit showing all the details of: register sizes, shifters, sub-modules, and interconnects.

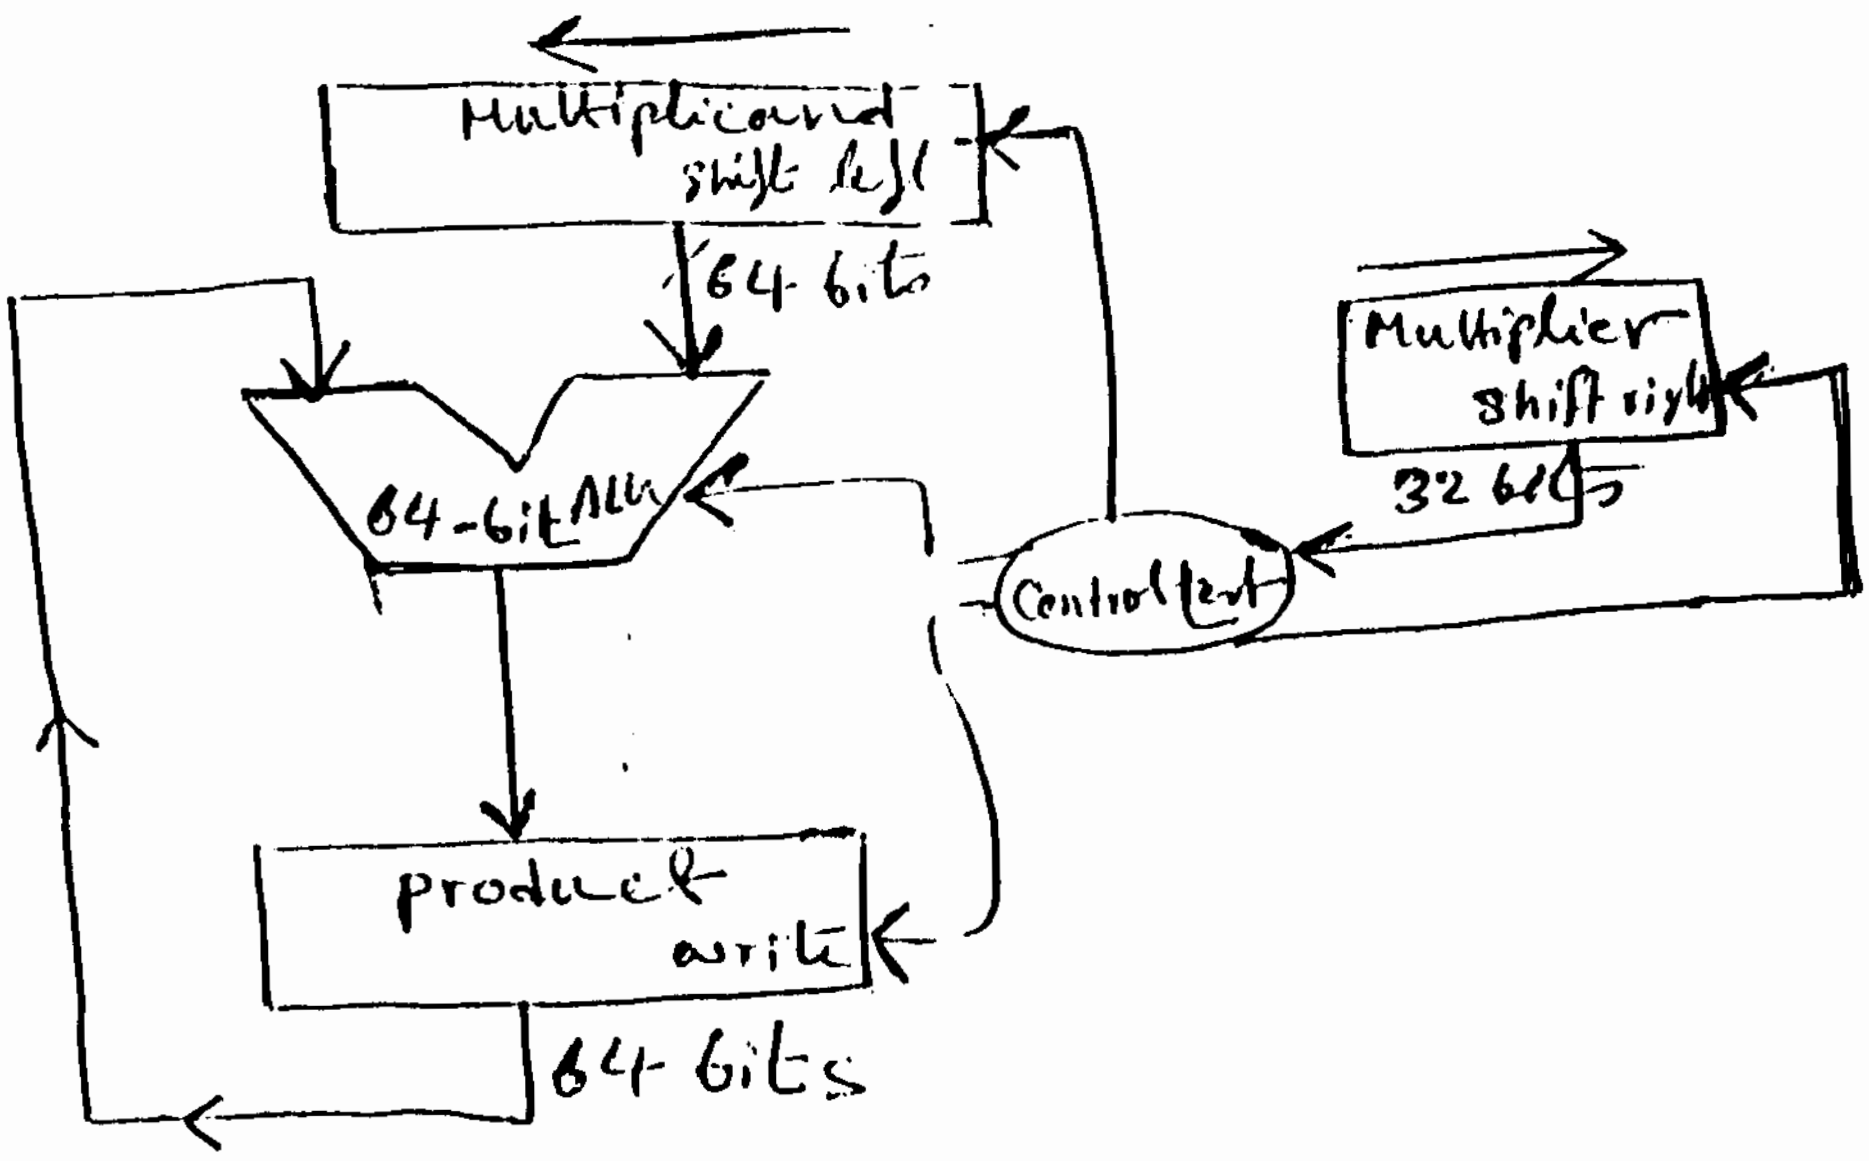

3 **Q.** Using 4-bit binary numbers, multiply 2_{10} X 3_{10} showing *all* the detailed steps using the the sequential multiplication Algorithm

Iteration	Step	Multiplier	Multiplicand	Product
0	Initial values	0011	0000 0010	0000 0000
1	1a: 1 ⇒ Prod = Prod + Mcand	0011	0000 0010	0000 0010
	2: Shift left Multiplicand	0011	0000 0100	0000 0010
	3: Shift right Multiplier	0001	0000 0100	0000 0010
2	1a: 1 ⇒ Prod = Prod + Mcand	0001	0000 0100	0000 0110
	2: Shift left Multiplicand	0001	0000 1000	0000 0110
	3: Shift right Multiplier	0000	0000 1000	0000 0110
3	1: 0 ⇒ no operation	0000	0000 1000	0000 0110
	2: Shift left Multiplicand	0000	0001 0000	0000 0110
	3: Shift right Multiplier	0000	0001 0000	0000 0110
4	1: 0 ⇒ no operation	0000	0001 0000	0000 0110
	2: Shift left Multiplicand	0000	0010 0000	0000 0110
	3: Shift right Multiplier	0000	0010 0000	0000 0110

3 Q. Why doesn't MISP have subtract immediate instruction?

Since MIPS includes add immediate and since immediate can be +ve or -ve, subtract immediate would be redundant.